au by KDDI

biblio Leaf SP02

Basic Guide

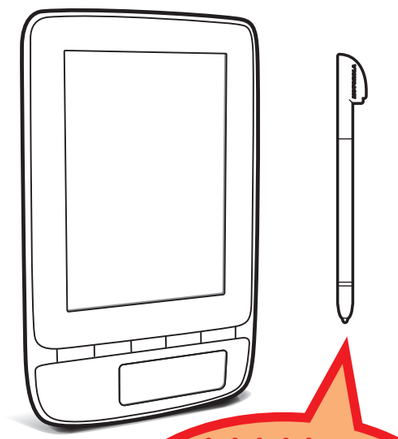

Use only the stylus pen (provided) to operate the touch panel! Do not use fingers or other pen-shaped objects.

December 2010, 1st Edition

Sold by: KDDI CORPORATION, Okinawa Cellular Telephone Company
Imported by: KAGA ELECTRONICS CO., LTD
Manufactured by: HON HAI PRECISION IND. CO., LTD

Charging

There are two ways of charging the battery pack, charging by the AC adapter and by charging from a PC.

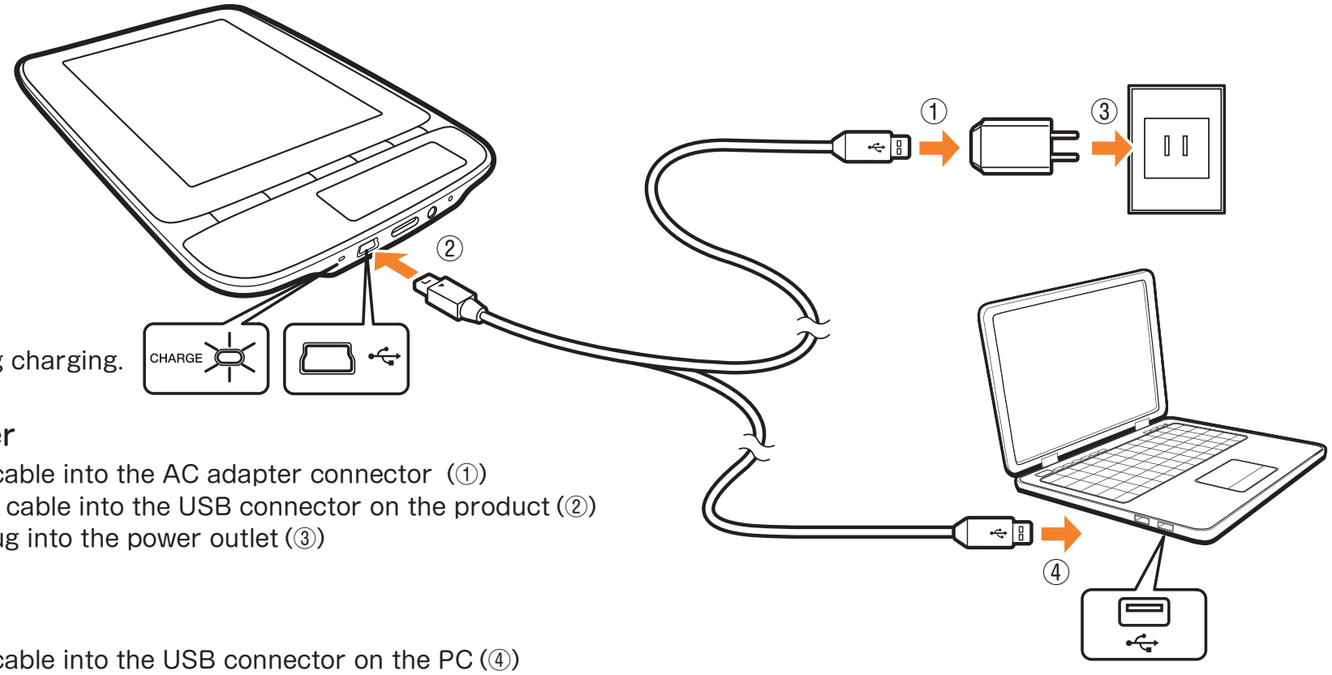

The charging LED lights red during charging.

●Charging by the AC adapter

1 Insert the larger end of the USB cable into the AC adapter connector (①)
2 Insert the smaller end of the USB cable into the USB connector on the product (②)
3 Insert the AC adapter's power plug into the power outlet (③)

●Charging from a PC

1 Start up the PC
2 Insert the larger end of the USB cable into the USB connector on the PC (④)
3 Insert the smaller end of the USB cable into the USB connector on the product (②)
4 Tap "Charging Mode" on the product

Accessories

①biblio Leaf SP02 (including battery pack and battery cover) and stylus pen

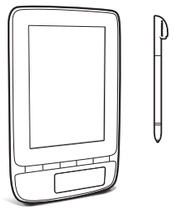

②Instruction Manual

③Basic Guide

④Warranty

⑤biblio Leaf SP02 AC adapter 01

⑥biblio Leaf SP02 USB cable (sample)

⑦biblio Leaf SP02 book cover

Names of parts

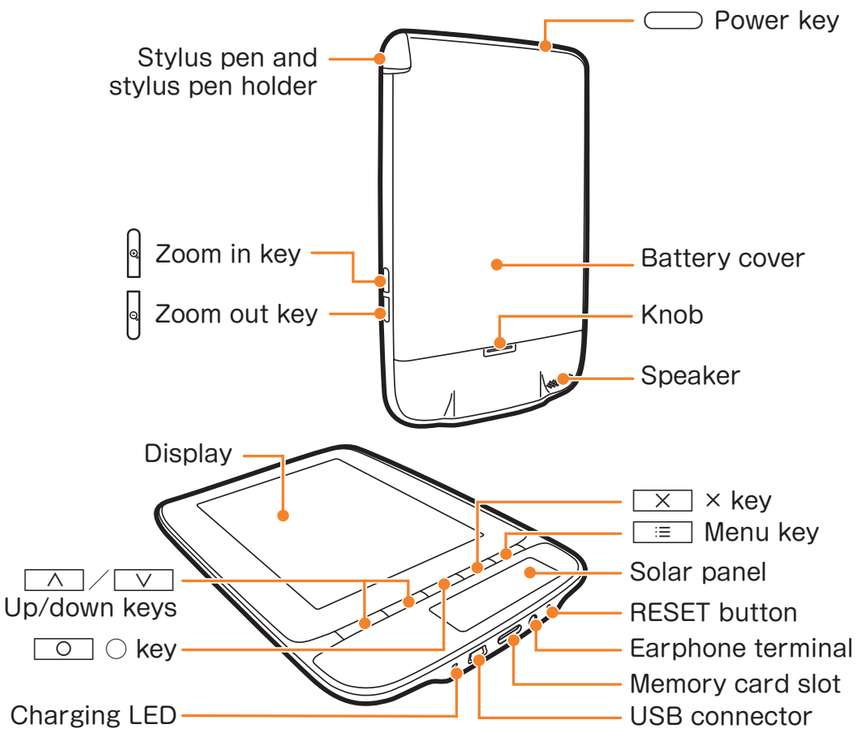

Turning the power on/off

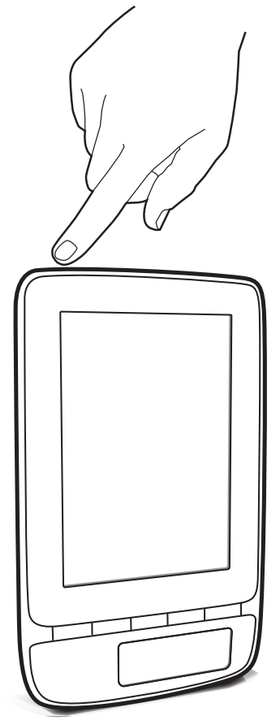

To turn the power on, press and hold ⬭ (power key) until "au by KDDI" appears.

To turn the power off, press and hold ⬭ (power key) until the power turns off.

You can activate the screensaver (sleep mode) to save battery power.

●Activating the screensaver manually

You can activate the screensaver (sleep mode) manually by pressing ⬭ (power key).

●Activating the screensaver automatically

The screensaver is automatically activated after you have not operated the product for a fixed length of time.

* To exit the screensaver, press ⬭ (power key) again.
* Note that pressing and holding ⬭ (power key) turns the power off.

Home screen

The home screen is displayed by holding down [×].

My Library
You can view books you have bought from the LISMO Book Store, electronic books already saved on the product, electronic books saved on microSD card, and other books.

LISMO Book Store
This allows you to connect to a 3G network or wireless LAN to utilize the LISMO Book Store to buy electronic books.

Applications
You can use Notes, Drawings, Calendar, and Calculator.

Settings
You can set the display language, date/time, screensaver (sleep mode) activation time, network, and other settings.

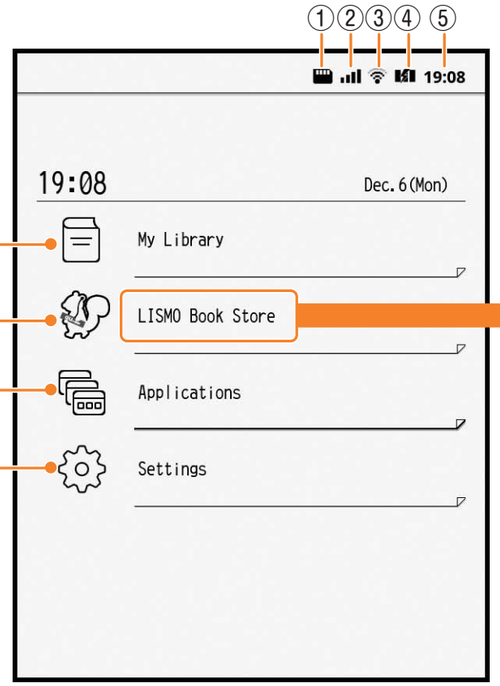

①Displayed when a microSD card is inserted.

②Displays the reception of the 3G network being accessed.

③Displays the reception of the wireless LAN being accessed. Displayed when the product is connected to a wireless LAN.

④Displays battery status. is displayed while charging.

⑤The time is displayed.

Press [∧]/[∨] to select "LISMO Book Store", and press [○].

LISMO Book Store

Here, you can buy electronic books, and view ranking, special editions, latest information, etc.
Key operations are not possible from the LISMO Book Store top screen. To perform operations, use the stylus pen.
*To use the LISMO Book Store, the au one-ID is required.

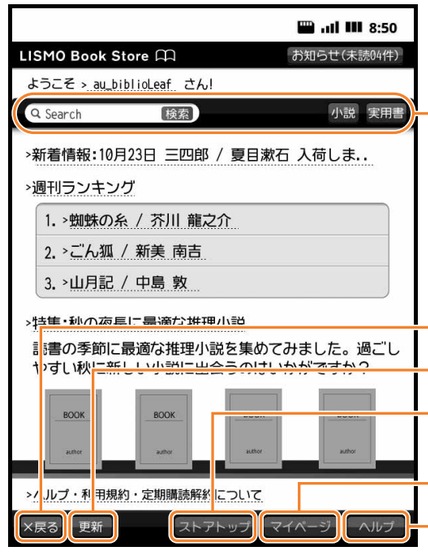

①You can search by entering text or selecting categories.

②Goes back to the previous page.

③Refreshes the page.

④Goes back to the LISMO Book Store top screen.

⑤Displays My Page.

⑥You can check the details and terms of service.

Electronic books

You can read electronic books in XMDF*, PDF and ePub formats on the product.
*XMDF format data can only be displayed if the content is preset or has been downloaded with the product.

Select an electronic book

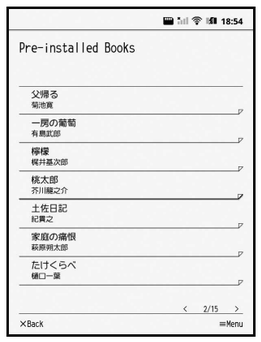

Select the electronic book you want to read

Enlarge text

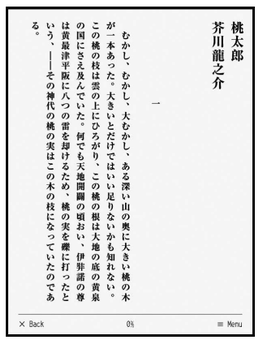

Press [+] (zoom in key)

Display the next page

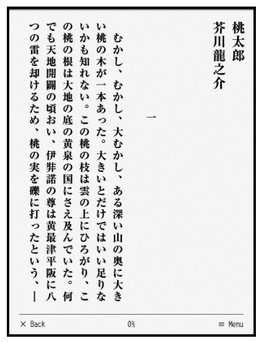

Press [∨]

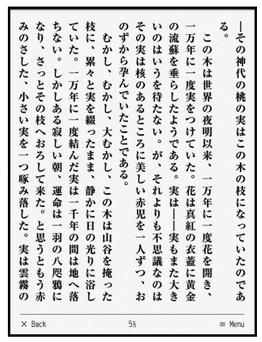

To display the previous page, press [∧].

Entering text

Use the software keyboard to enter text. Tapping an entry field displays the software keyboard. Keys cannot be used to enter text. To perform text entry operations, use the stylus pen.

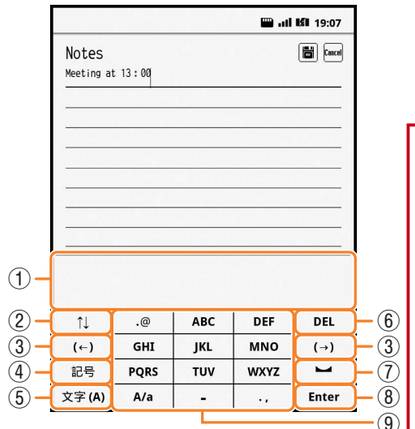

①**Conversion candidates**
Words, etc. predicted from the characters you have entered are displayed.

②↑ ↓
Switches to the QWERTY keyboard.

③(←) / (→)
Moves the cursor one character backward or forward.

④**Symbols**
Displays symbols and emoticons.

Alphanumerics*
The hiragana, katakana, English characters, and number for the key are displayed as conversion candidates.
* Displayed when the character is not confirmed.

⑤**Text**
You can change the text type. (Hiragana → Single-byte katakana → Double-byte katakana → English characters → Numbers)

⑥**DEL**
Deletes the character immediately before the cursor.

⑦**␣/convert**
Enters a space or converts entered characters to kanji.

⑧**Enter**
Applies characters you have entered.

⑨**Character keys**
Characters are arranged in the same order as on a typical mobile phone. Continuously tap the key assigned with the character you want to enter until the desired character is displayed.